


Seats

Removing and Installing Front Seats

18 B0

Removal

1. Remove rubber floor mat in front of the seat.
2. Press seat catch lever and move seat fully forward.
3. Remove seat.

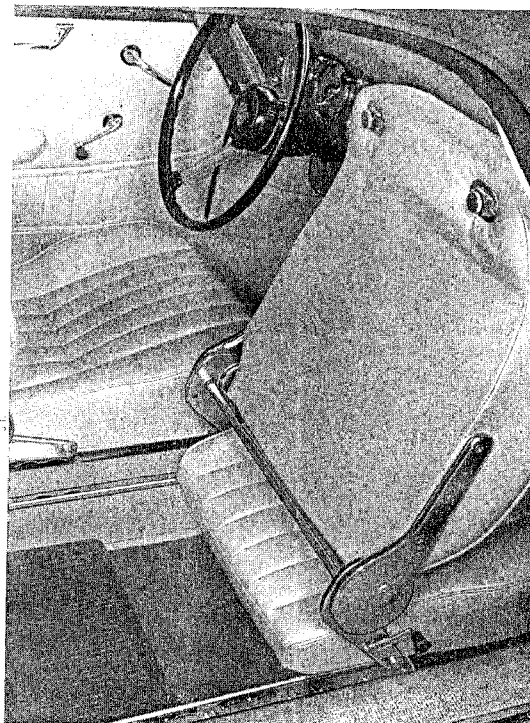

Installation

Before installing the seat, grease the rails and inspect the surfaces of the sliding parts.

Fig. 88

Removing and Installing Folding Back Rests

Removal

1. Remove the two screws at the rear of the mat covering the back of the seat.
3. Remove both hinge screws noting the position of the washers.

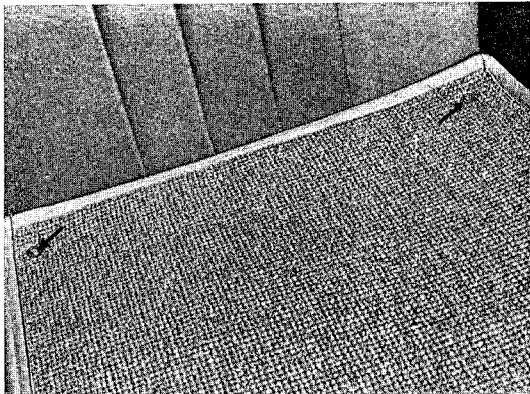


Fig. 89

2. Raise the back rest.

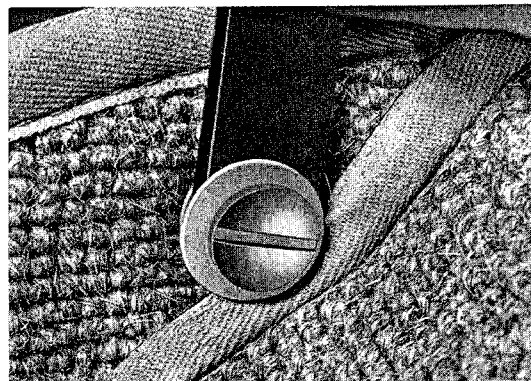


Fig. 90

4. Remove back rest.

Installation

5. The installation is accomplished in the reverse order of removal.