

 
**SPECIAL TOOLS**

FOR


GROUP **R**

## Puller for Brake Drums

P 30

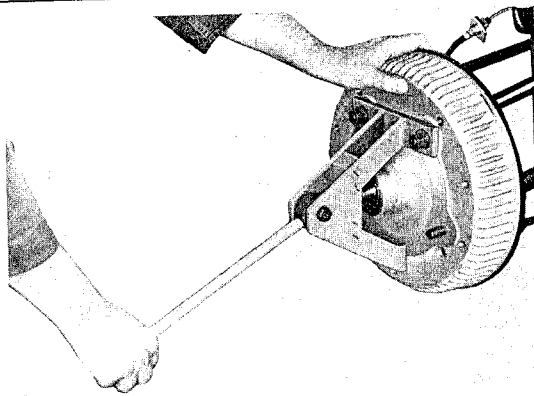

Application

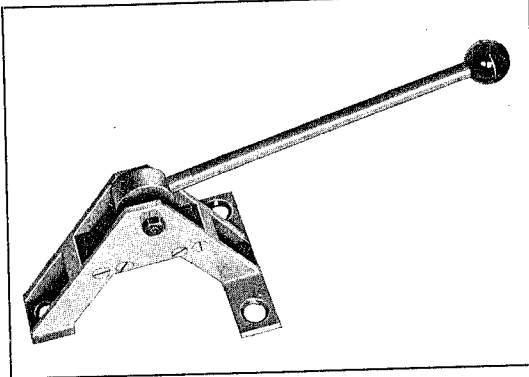 

Tool


**Use:** To remove brake drums

**See:** Workshop Manual, group R, operation 1 RA


Subject to change

## Holder for Pinion Shaft

 P 31

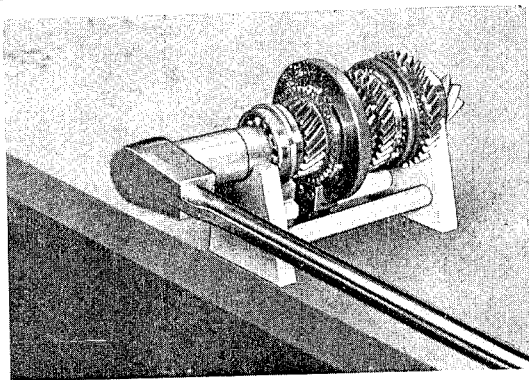

Application


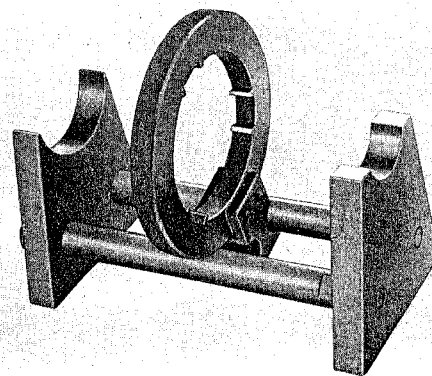 




Tool

**Use:** To loosen or tighten pinion shaft castle nut

**See:** Workshop Manual, group R, operation 6 RA


Subject to change

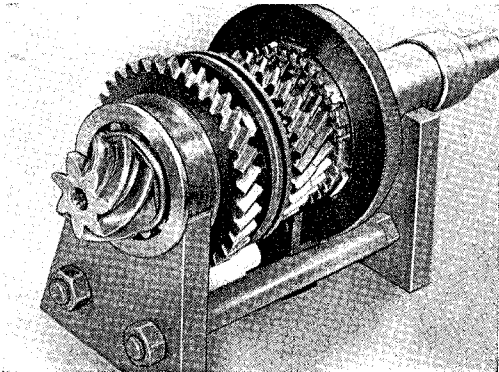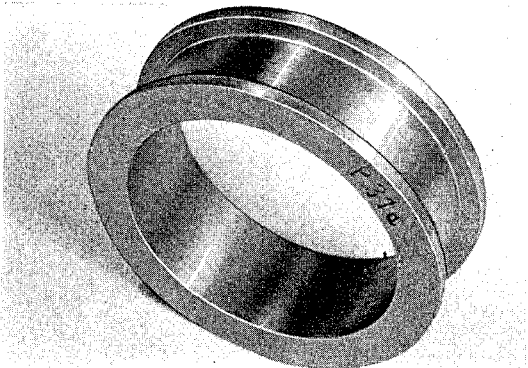Guide Pinion Shaft	P 31a
	
Application	Tool
<b>Use:</b> Used with P 31 to loosen or tighten pinion shaft castel nut	
<b>See:</b> Workshop Manual, group R, operation 6 RA	
Subject to change	

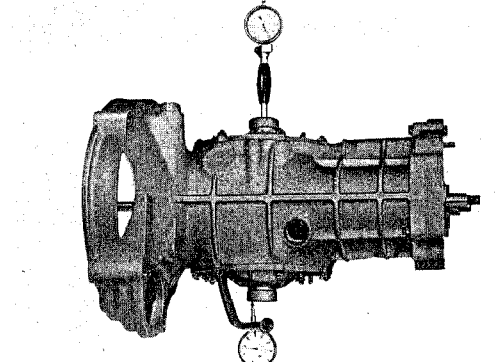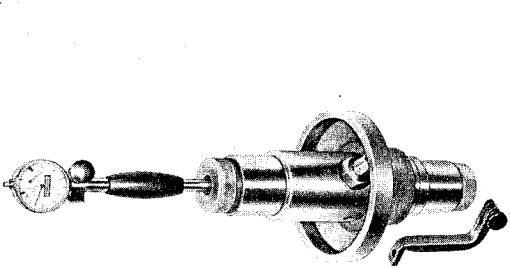
Gauge	P 33
	
Application	Tool
<b>Use:</b> To measure housing depth and to determine spacers for differential and final adjustment of ring and pinion	
<b>See:</b> Workshop Manual, group R, operation 11 RA	
Subject to change	

## Pinion Shaft Holding Clamp

 P 34a

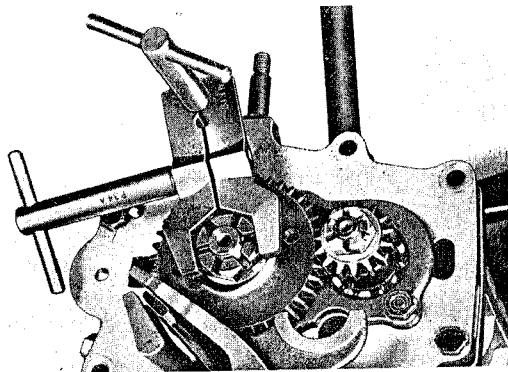

Application

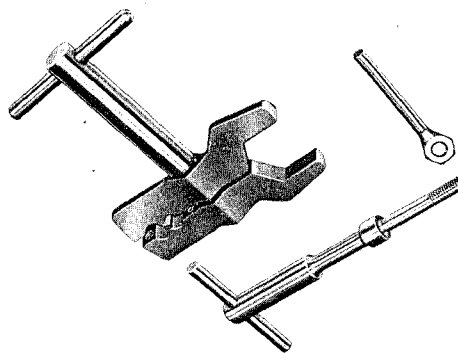 

Tool


**Use:** To hold pinion shaft while measuring the backlash of the ring and pinion gear

**See:** Workshop Manual, group R, operation 14 RA


Subject to change

## Wrench Guide and Holder

 P 36

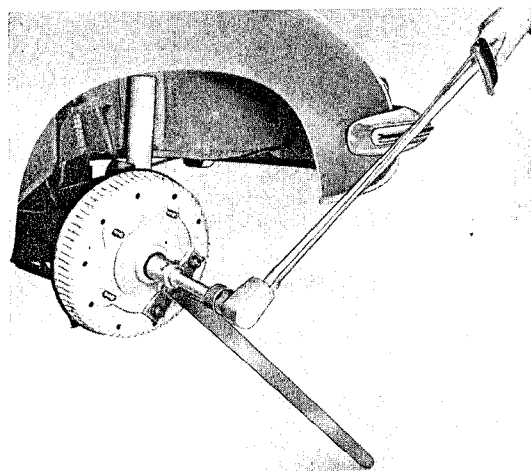

Application

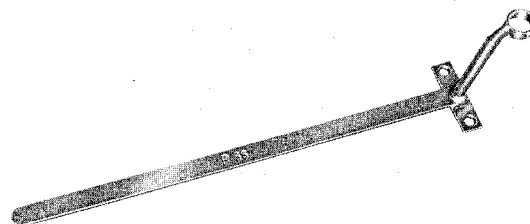 

Tool


**Use:** To loosen and tighten rear axle nuts (used with P 42, P 44, and P 44a)

**See:** Workshop Manual, group R, operation 1 RA


Subject to change

## Holder

 P 36a

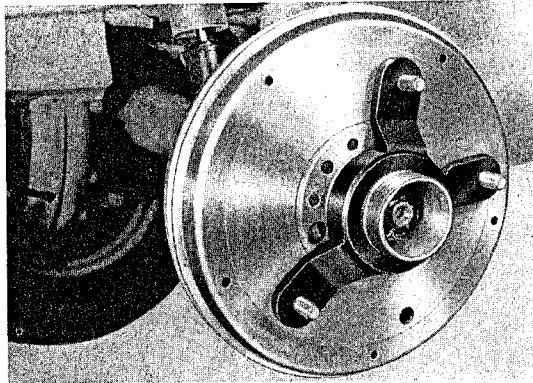

Application

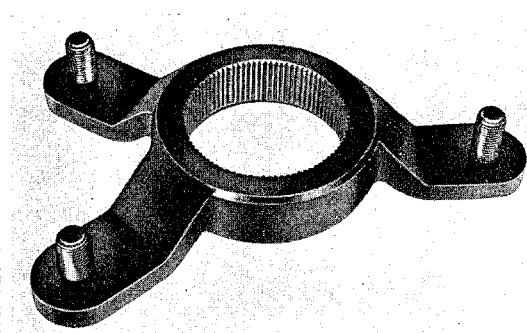 

Tool


**Use:** To loosen and tighten rear axle nuts on cars with knock-off wheels, used with P 36, P 42, P 44, and P 44a

See: Workshop Manual, group R, operation 1 RA


Subject to change

## Holder for Main Shaft

 P 37

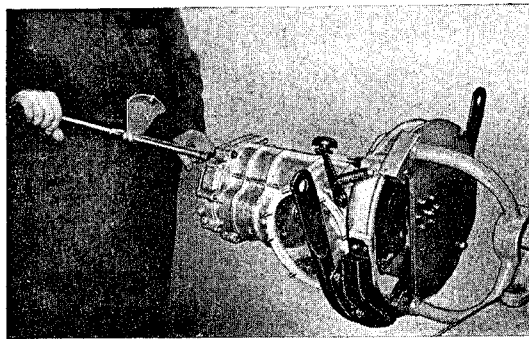

Application

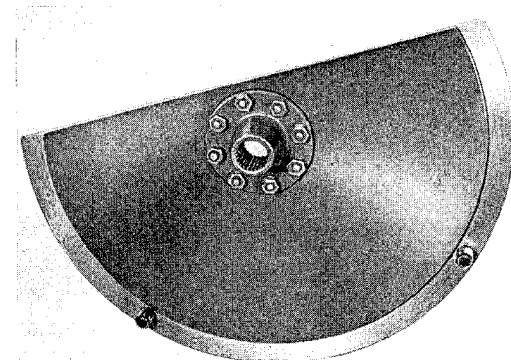 

Tool


**Use:** To hold the main shaft while loosening and tightening castle nuts of the main and pinion shafts

See: Workshop Manual, group R, operation 2 RA


Subject to change

## Collar (long)

 P 39

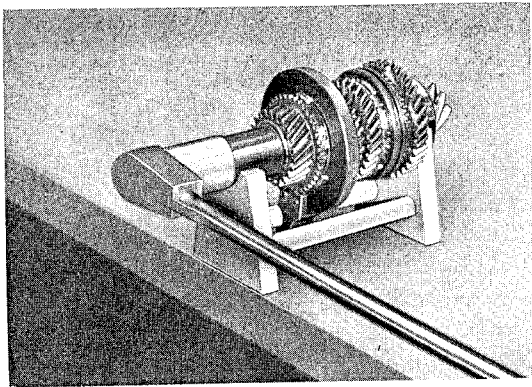

Application

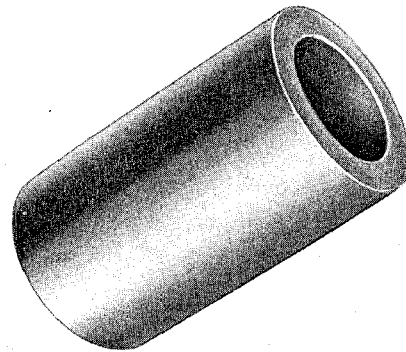 

Tool


**Use:** To tighten gears and sleeves on pinion shaft

**See:** Workshop Manual, group R, operation 6 RA


Subject to change

## Assembly Ring

 P 41

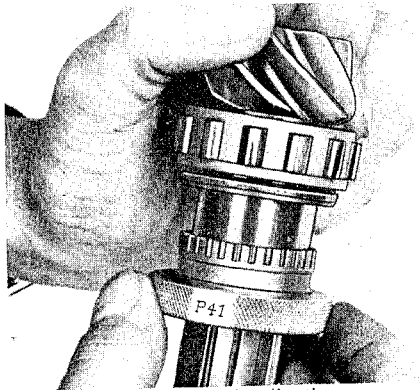

Application

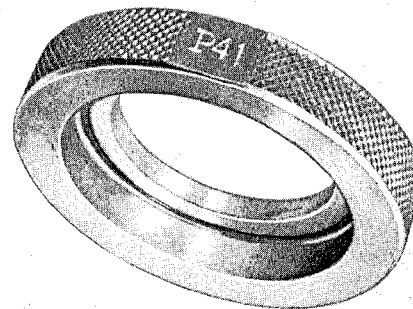 

Tool


**Use:** To install roller bearing cage and rollers on pinion shaft

**See:** Workshop Manual, group R, operation 6 RA


Subject to change

## Torque Wrench (50 mkg. 360 ft. lb. cap.)

 P 42

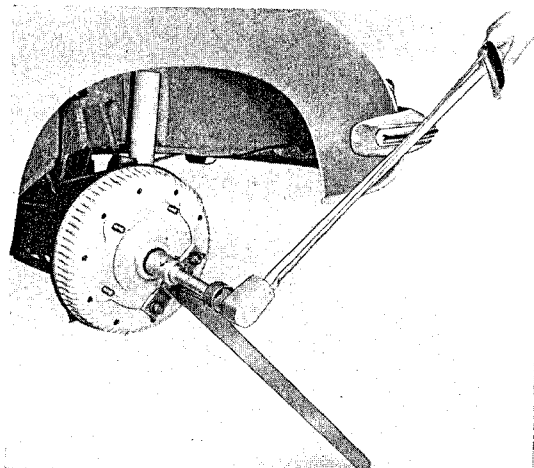

Application

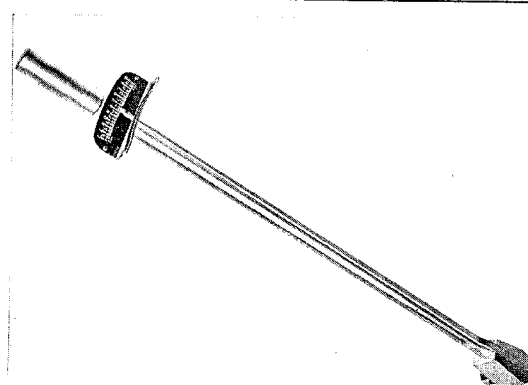 

Tool


**Use:** To loosen and tighten rear axle nuts, used with P 44, P 44a, and P 36

**See:** Workshop Manual, group R, operation 1 RA


Subject to change

## Socket 36 mm

 P 44

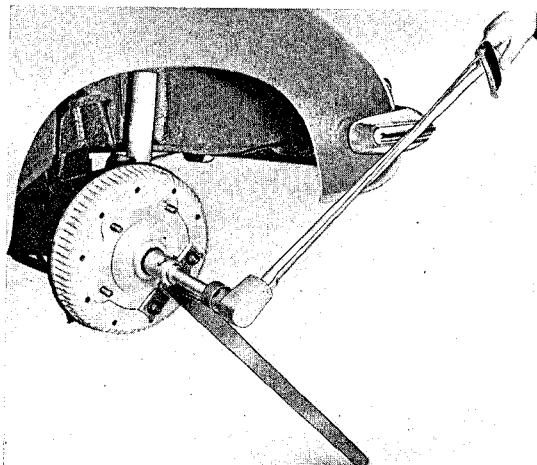

Application

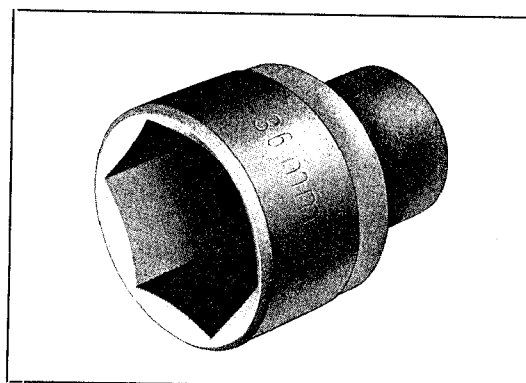 

Tool


**Use:** To loosen and tighten rear axle nuts, used with P 36, P 42, and P44a

**See:** Workshop Manual, group R, operation 1 RA


Subject to change

## Socket Extension

 P 44a

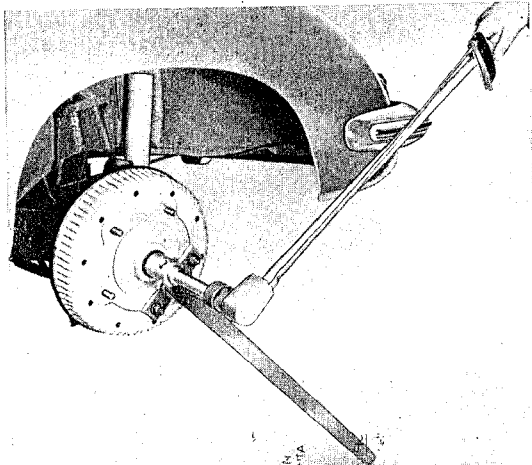

Application

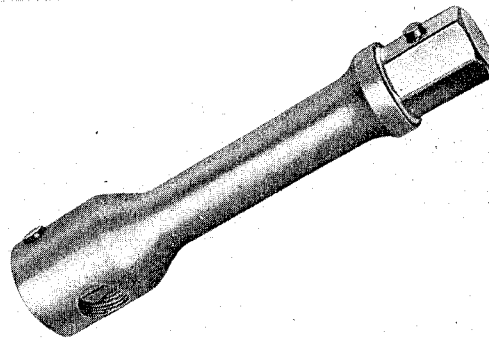 

Tool


**Use:** To loosen and tighten rear axle nuts, used with P 36, P 42, and P 44

**See:** Workshop Manual, group R, operation 1 RA


Subject to change

## Tube

 P 45

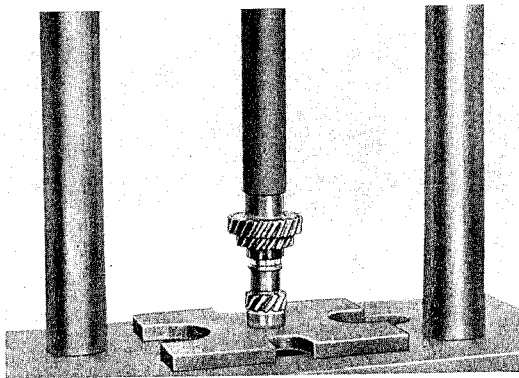

Application

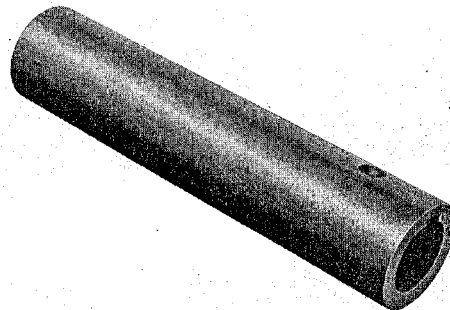 

Tool

**Use:** To press gears onto main shaft


**See:** Workshop Manual, group R, operation 7 RA

Subject to change




## Socket 32 mm

 P 46

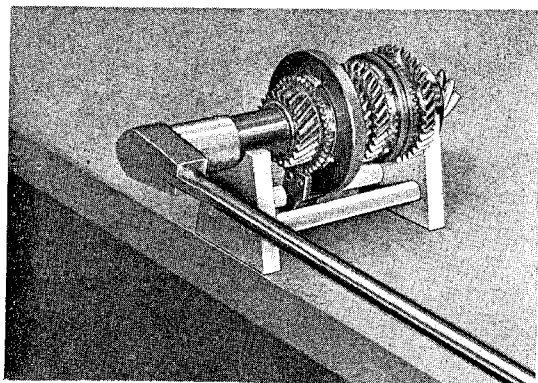

Application

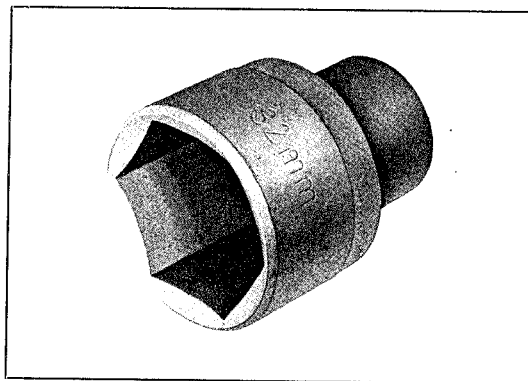 

Tool


**Use:** To loosen and tighten castle nut on pinion shaft

**See:** Workshop Manual, group R, operation 6 RA


Subject to change

## Radius Arm Jack

 P 53

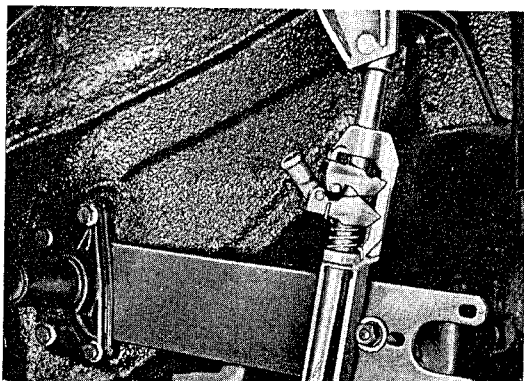

Application

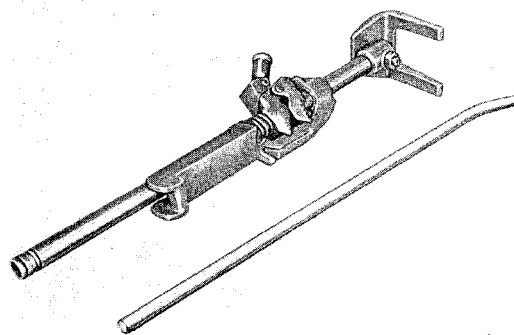 

Tool


**Use:** To raise radius arm for transmission and shock absorber installation

**See:** Workshop Manual, group R, operation 24 RA


Subject to change

## Press Stand

 P 55

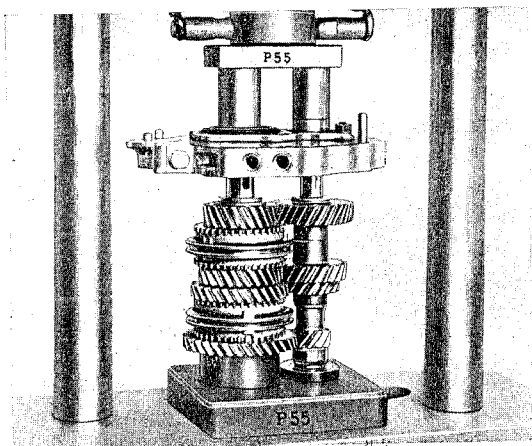

Application

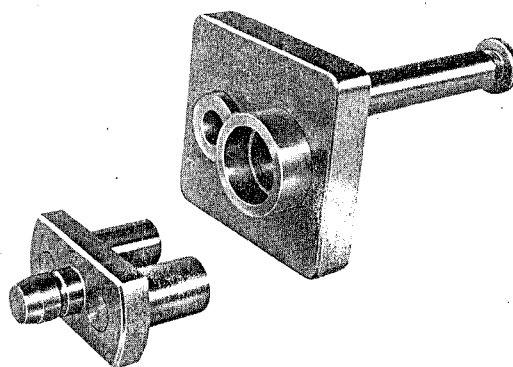 

Tool


**Use:** To press intermediate plate onto main and pinion shafts

**See:** Workshop Manual, group R, operation 2 RA


Subject to change

## Press block

 P 56

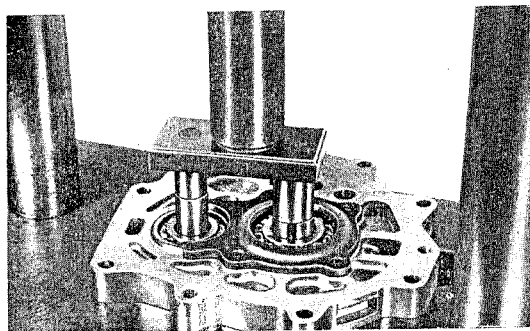

Application

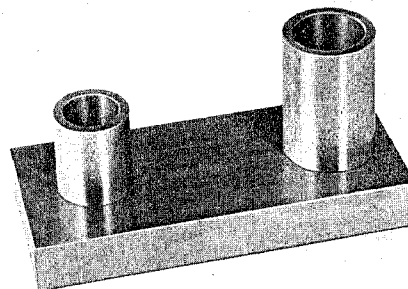 

Tool


**Use:** To press main and pinion shafts out of intermediate plate

**See:** Workshop Manual, group R, operation 2 RA


Subject to change

## Guide Pin (short)

 P 57

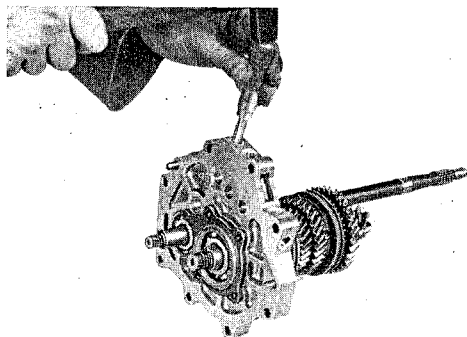

Application

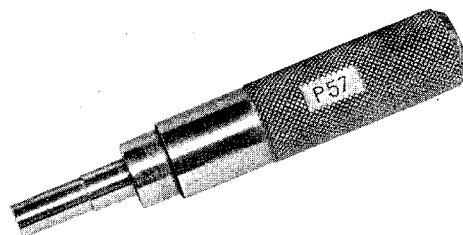 

Tool


**Use:** To install selector rod lock bushing (1st, 2nd, and reverse gear)

See: Workshop Manual, group R, operation 9 RA


Subject to change

## Guide Pin (long)

 P 58

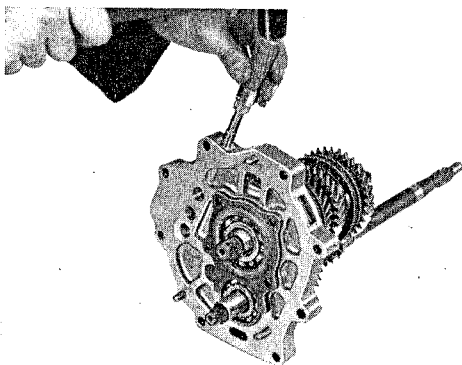

Application

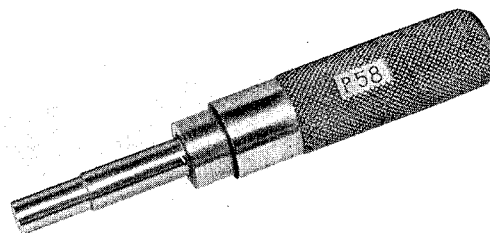 

Tool


**Use:** To install selector rod lock bushing (3rd and 4th gear)

See: Workshop Manual, group R, operation 9 RA


Subject to change

## Puller

 P 59

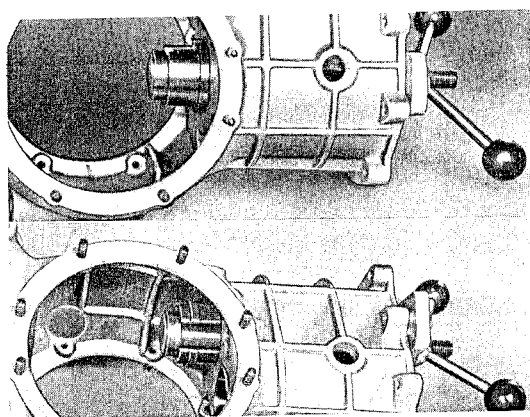

Application

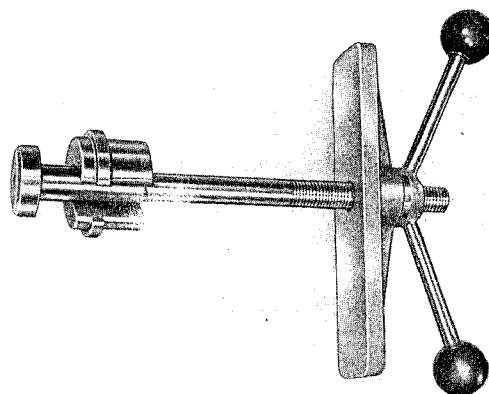 

Tool


**Use:** To remove outer race of main and pinion shafts from transmission housing

See: Workshop Manual, group R, operation 2 RA


Subject to change

## Mandrel

 P 60

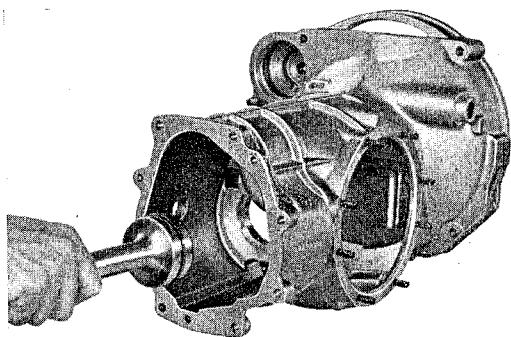

Application

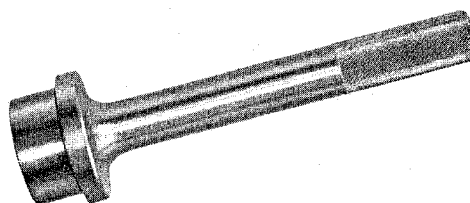 

Tool


**Use:** To install roller bearing race in transmission housing (pinion shaft)

See: Workshop Manual, group R, operation 2 RA


Subject to change

## Mandrel

 P 61

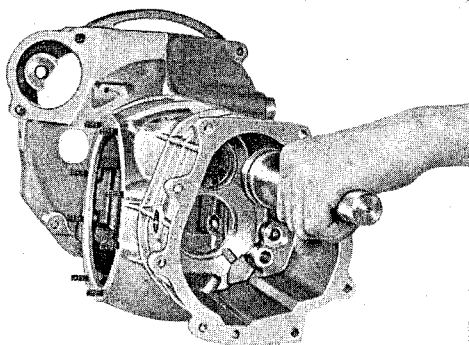

Application

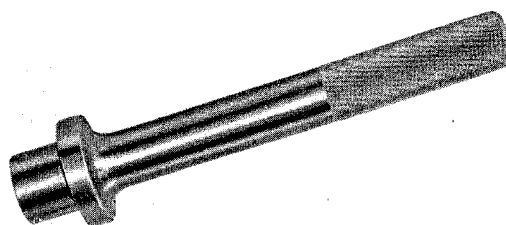 

Tool


**Use:** To install roller bearing race in transmission housing (main shaft)

**See:** Workshop Manual, group R, operation 2 RA


Subject to change

## Drift

 P 62

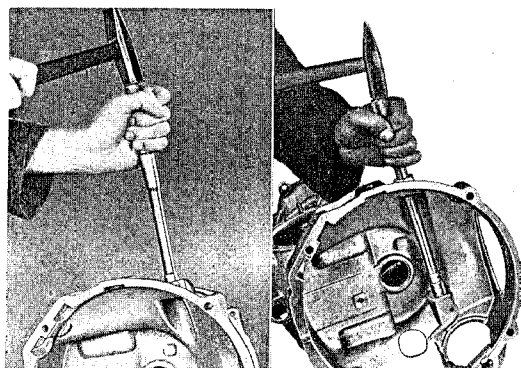

Application

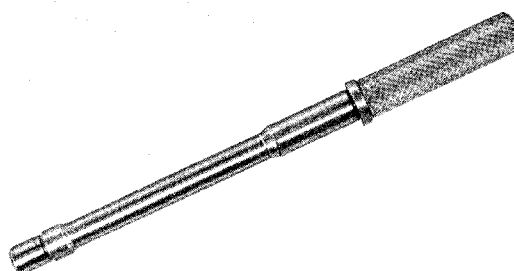 

Tool


**Use:** To remove or install clutch pivot shaft bushing

**See:** Workshop Manual, group R, operation 20 RA


Subject to change

## Mandrel

 P 64

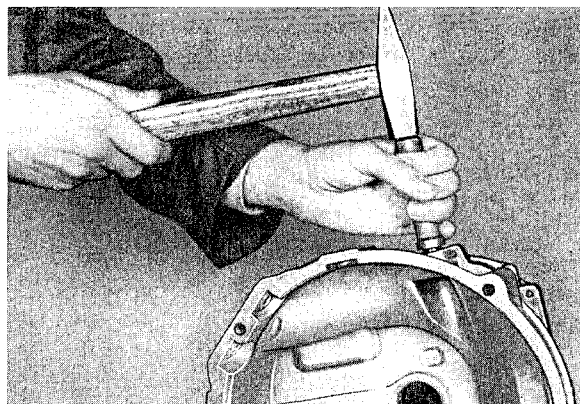

Application

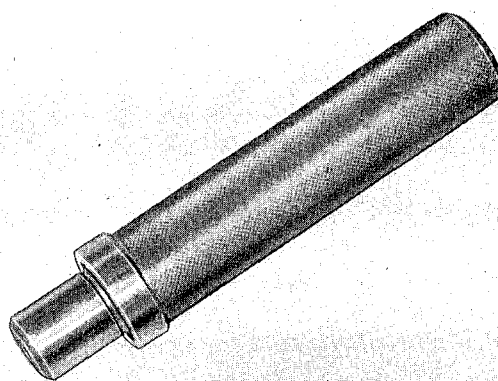 

Tool


**Use:** To install outer bushing for clutch pivot shaft

See: Workshop Manual, group R, operation 20 RA


Subject to change

## Plate

 P 65

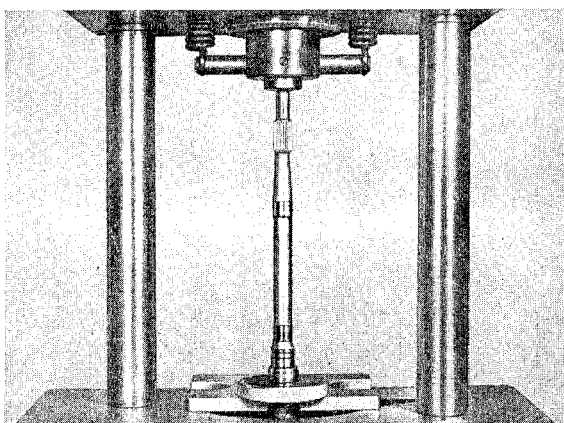

Application

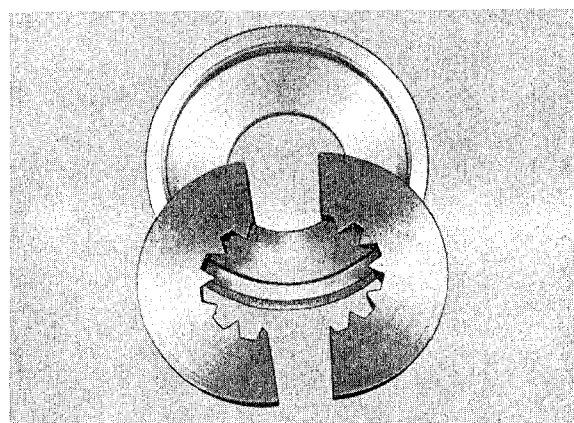 

Tool


**Use:** To remove inner roller bearing race from main shaft

See: Workshop Manual, group R, operation 9 RA


Subject to change

## Puller

 P 66

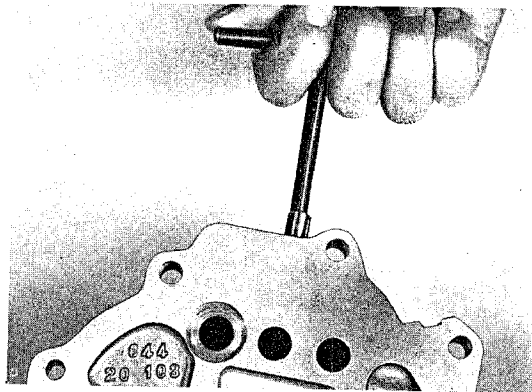

Application

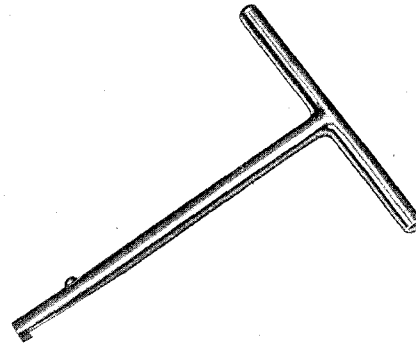 

Tool


**Use:** To remove selector rod lock bushings from intermediate plate

See: Workshop Manual, group R, operation 9 RA


Subject to change

## Press Guide

 P 67

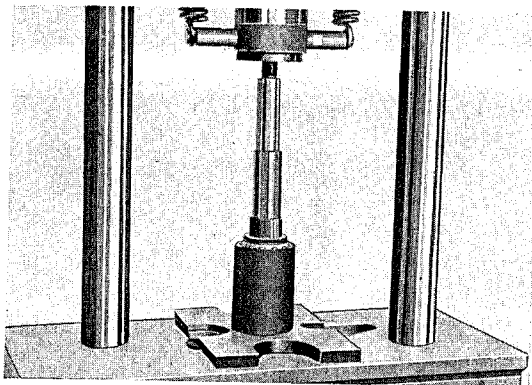

Application

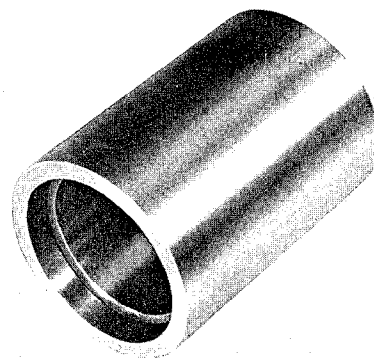 

Tool


**Use:** To remove roller bearing from pinion shaft

See: Workshop Manual, group R, operation 6 RA


Subject to change

## Selector Rod Guide

 P 68

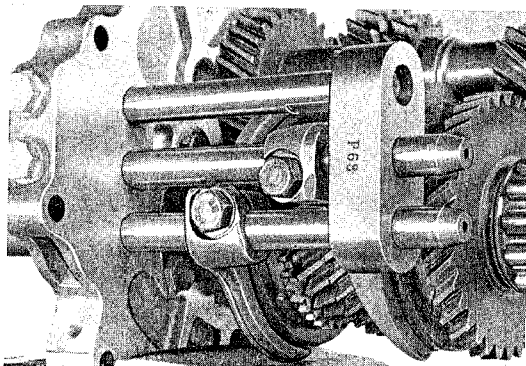

Application

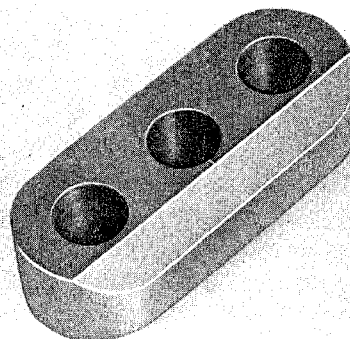 

Tool

**Use:** To guide selector rods while adjusting forks

**See:** Workshop Manual, group R, operation 2 RA

Subject to change