

## Servicing Air Cleaners

The oil-wetted wire mesh air cleaners remove dust particles and impurities from the induction air. The air cleaners should be serviced at intervals dictated by local dust or air contamination conditions.

1. Remove retaining screws.
2. Withdraw air cleaners.
3. Wash air cleaners in clean solvent or gasoline.
4. Thoroughly clear air cleaners with compressed air.
5. Apply a thin coat of oil to wire mesh.
6. Reinstall air cleaners with gaskets and tighten retaining screws.

missing SF18

can email copy to [356@miplace.com](mailto:356@miplace.com)