

Ball Check Valve in Rocker Box Covers

A ball check valve has been installed in the rocker box covers to prevent oil loss through the breather hole while traveling in fast curves. The check valve should be cleaned with solvent and inspected for proper operation when the valve clearance is adjusted. Disassemble and clean the valve if necessary.

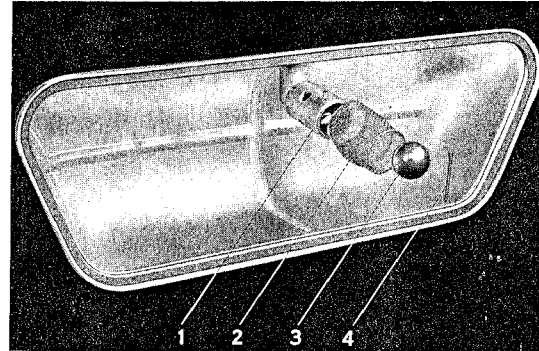


Fig. 16

- | | |
|-----------------|--------------|
| ① Valve housing | ③ Ball |
| ② Screen | ④ Cotter key |