


SPECIAL TOOLS

TO


GROUP T

Puller for Brake Drums

P 30

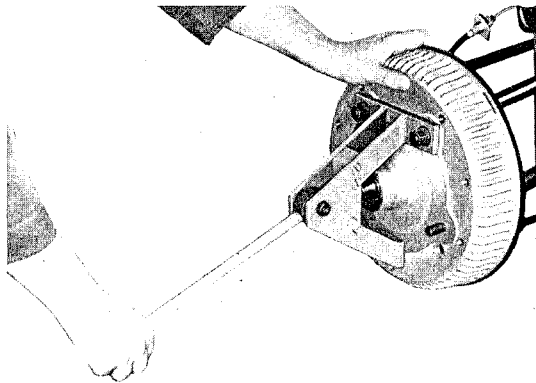

Application

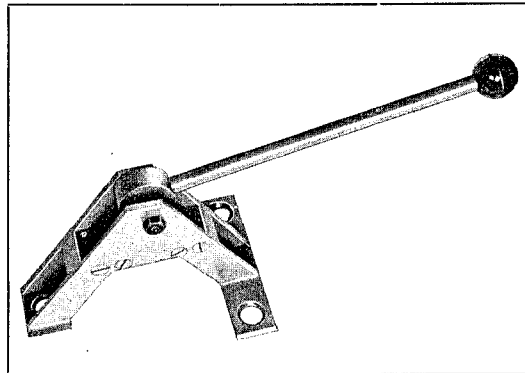

Tool


Purpose: To hold the brake drum and to guide the wrench when tightening and loosening the rear axle nut. (In conjunction with P 42, P 44, and P 44 a, if necessary P 36 a.)

See Workshop Manual, Group T Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.


Subject to Modification

Brake Drum Holder and Wrench Guide

P 36

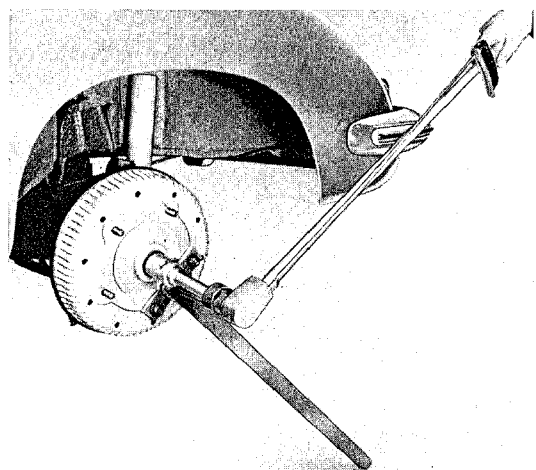

Application

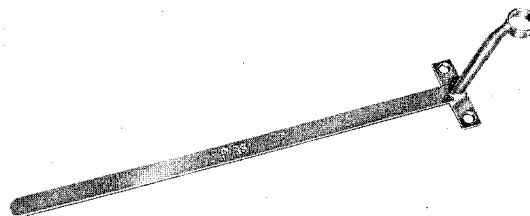

Tool


Purpose: To pull off brake drums, front and rear.

See Workshop Manual, Group T Procedures: 3 Ti, 4 Ti, 7 Ti, 8 Ti, 9 Ti, 10 Ti, 11 Ti.


Subject to Modification

Holder

P 36a

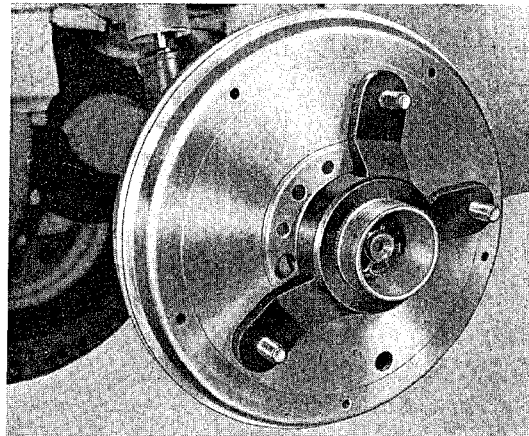

Application

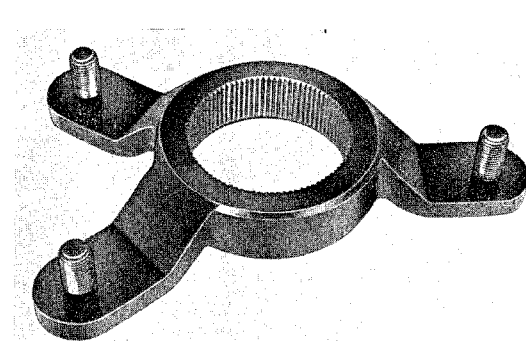

Tool


Purpose: To loosen and tighten rear axle nuts of vehicles with Rudge wheel lock. (In conjunction with P 36, P 42, P 44, P 44 a.)

See Workshop Manual, Group T Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.


Subject to Modification

Madrel for Brake Drums

P 38

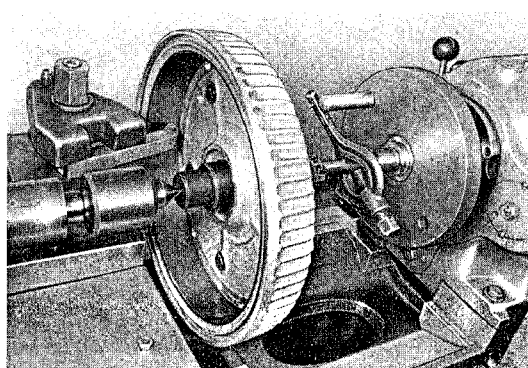

Application


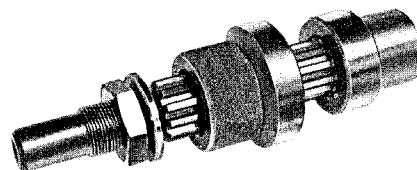




Tool



Purpose: For machining brake drums.



See Workshop Manual, Group T Procedure: 12 Ti.

Subject to Modification.

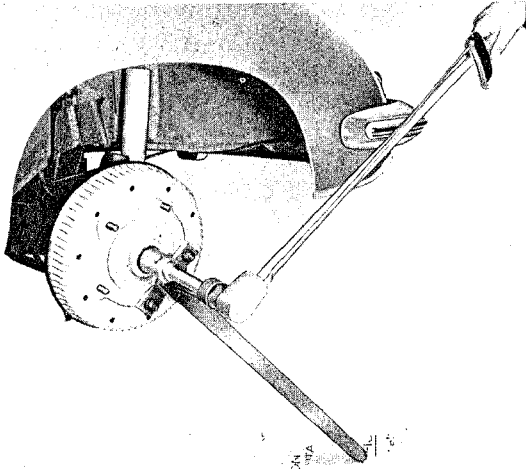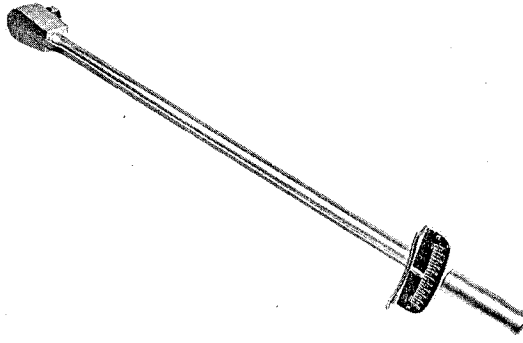Troque Wrench (up to 50 mkg = 360 lbs. ft.)	P 42
<div data-bbox="248 405 771 871">  <p>Application</p> </div> <div data-bbox="787 426 1307 766">  <p>Tool</p> </div> <p>Purpose: Used in conjunction with P 36, if nec. P 36 a, P 44 and P 44 a for tightening and loosening rear axle nuts.</p> <p>See Workshop Manual Group T Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.</p> <p>Subject to Modification</p>	

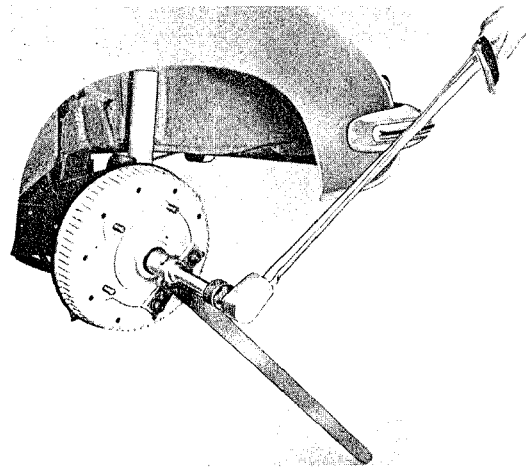
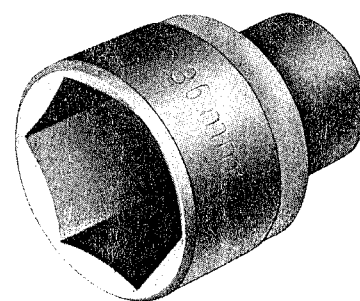
36 mm Socket	P 44
<div data-bbox="248 1203 771 1669">  <p>Application</p> </div> <div data-bbox="868 1266 1226 1564">  <p>Tool</p> </div> <p>Purpose: Used in conjunction with P 36, if nec. P 36 a, P 42 and P 44 a for tightening and loosening rear axle nuts.</p> <p>See Workshop Manual Group T Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.</p> <p>Subject to Modification</p>	

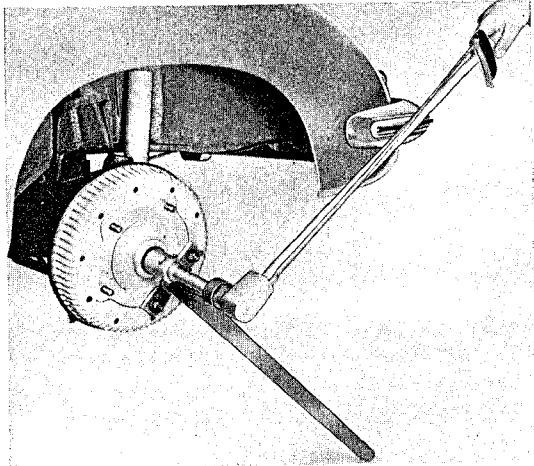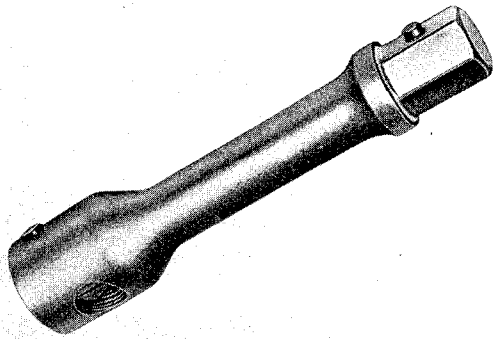Extension for Socket P 44	P 44a
 <p data-bbox="516 955 630 982">Application</p>	 <p data-bbox="1088 871 1136 898">Tool</p>
<p data-bbox="332 982 1356 1045">Purpose: Used in conjunction with P 36, if nec. P 36 a, P 42 and P 44 for tightening and loosening rear axle nuts.</p> <p data-bbox="332 1045 1015 1075">See Workshop Manual Group T Procedures: 4 Ti, 8 Ti, 10 Ti, 11 Ti.</p> <p data-bbox="714 1081 950 1108">Subject to Modification</p>	

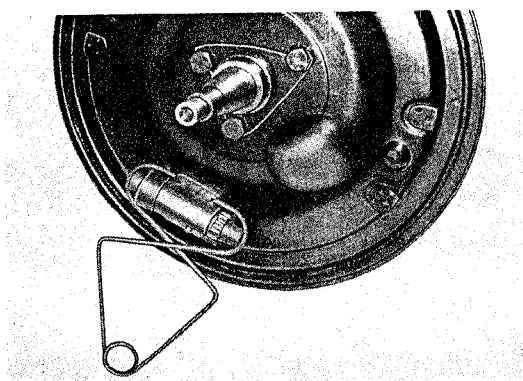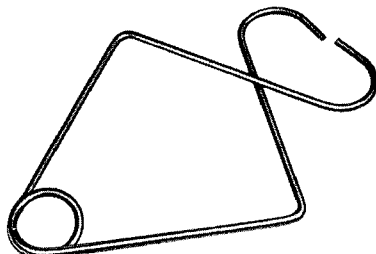Piston clamp for Wheel Brake Cylinder	P 47
 <p data-bbox="519 1675 633 1703">Application</p>	 <p data-bbox="1096 1669 1144 1696">Tool</p>
<p data-bbox="344 1743 1193 1774">Purpose: To hold the pistons in wheel brake cylinder while brake shoes are removed.</p> <p data-bbox="344 1810 1026 1841">See Workshop Manual Group T Procedures: 3 Ti, 7 Ti, 8 Ti, 11 Ti.</p> <p data-bbox="727 1879 961 1906">Subject to Modification</p>	

Flanging Tool for Brake Lines

P 48

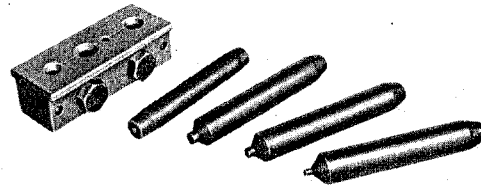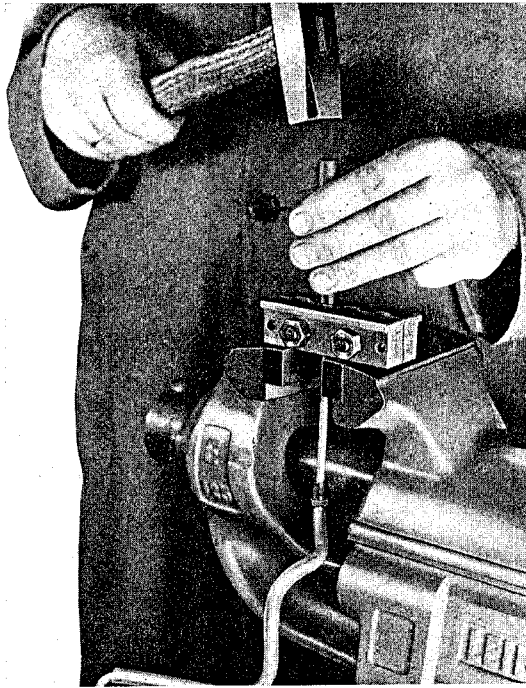

Tool

Purpose: To flange brake lines.

See Workshop Manual Group T Procedure: Tubing.

Application

Subject to Modification