Roadster Top

General


The top is attached in the front to the window frame and in the rear to the body. The main hinge is located just behind the door post on the side wall. The top is supported by two forward bows and one over the rear window besides the front and rear fastening frames.

29 BO


Removing and Installing Convertible Top

Removal


- 1. Roll down windows or open both doors.
- 2. Release the two hold down latches at the windshield.
- 3. Remove the hold down brackets in the rear.

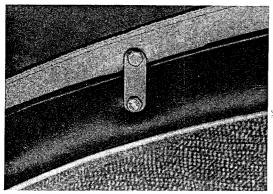

5. Remove the two mounting bolts from the side brackets.

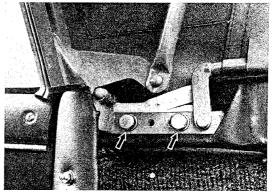



- 4. Remove the hinge cover by removing the philips 6. Lift off top. screw in its center.

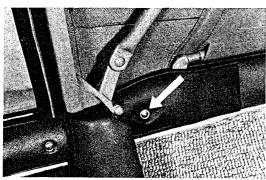

Installation

The installation is accomplished in the reverse order of removal, observing the following points:

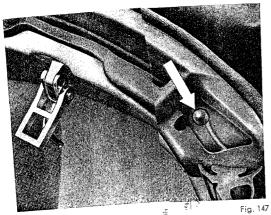

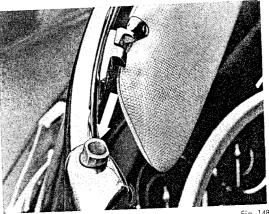

2. The top must seal against the windshield frame Fig. 147 5 and door windows.

ising and Lowering Convertible Top

30 BO

Lowering

- 1. Roll down windows or open d
- 2. Release front hold down latch

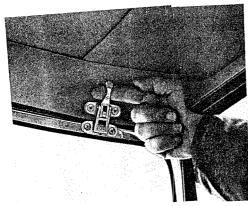


Fig. 149

3. Raise front portion of top and bo fold the top back.

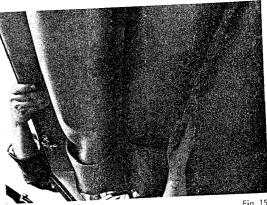


Fig. 150

4. Raise the canvas between the first and second bow so that the two can come together. The canvas should hang smoothly between the front frame and first bow.

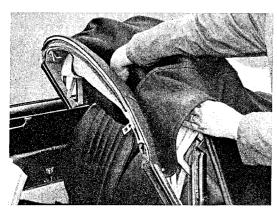


Fig. 151

5. Push first two bows close together, moving front frame rearward.

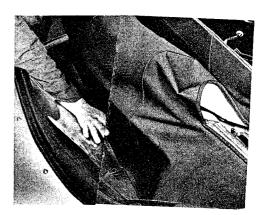


Fig. 154

7. Push the folded p down into the rear compartment.

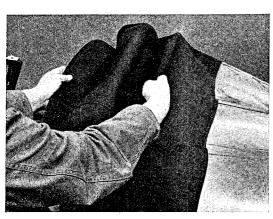


Fig. 152

6. Press the rear section and window inward, smoothing wrinkles which tend to form.

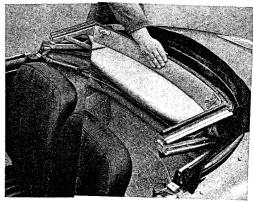


Fig. 15

8. Cover the ed top with the top boot, fastening it tightly the ball snaps furnished for this purpose.

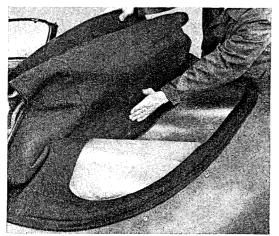


Fig. 153

Note

Before leg the convertible top, it should be cleaned a stiff brush. The plastic window should be cleaning a soft wet rag or sponge. A convertible nich is lowered in a dirty condition will soon led have a scratched rear window.

The top never be lowered when wet half a lowered when wet half.

The topnever be lowered when wet. When the car is p in a closed garage with a wet top the windowle car should be opened to allow better ventila'

Raising Convertible Top

The top is raised in the reverse order of lowering, observing the following points:

 Raise the front frame section until the cloth begins to become tight. Move the third bow back toward the rear window until it is between the seam and the window.

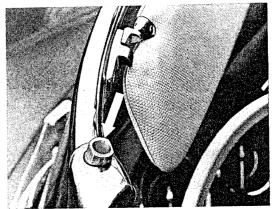


Fig. 157

2. Close the top so that the guide pins fit into the sockets on the windshield frame.

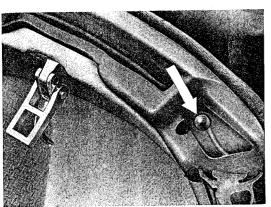


Fig. 156

3. Push down on the front frame and fasten the hold down latch.

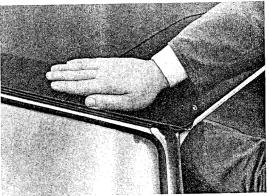


Fig. 158