

Pedal Assembly

General

The clutch and brake pedals are mounted on a common shaft while the accelerator pedal is mounted on a separate bracket. The brake pedal operates a hydraulic master cylinder directly through a short push rod while the clutch and throttle are connected to the pedals by cables.

26 B0

Removing and Installing Pedal Assembly

Removal

1. Remove rubber floor mat.
2. Disconnect the throttle linkage at the pedal.

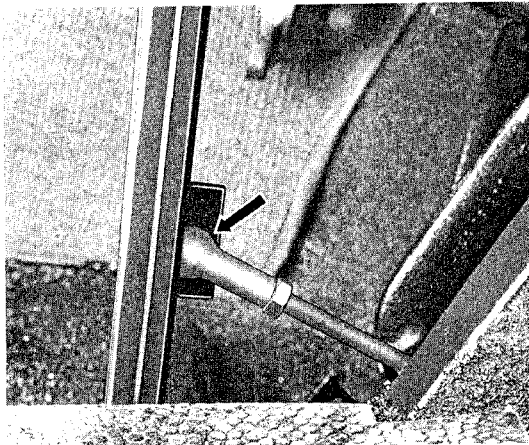


Fig. 124

4. Remove pedal board.

5. Disconnect clutch cable from pedal shaft. It may be necessary to hold the cable from twisting with pliers.

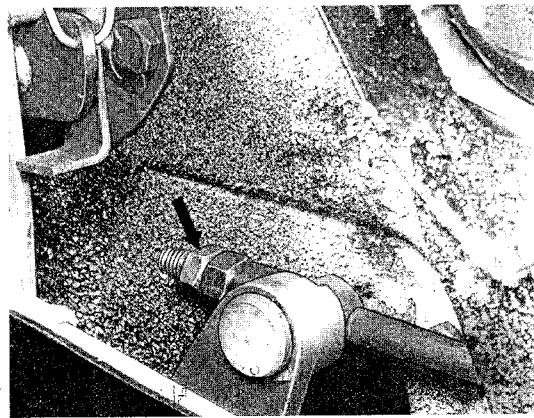


Fig. 126

3. Remove two screws at the accelerator pedal bracket and remove pedal.

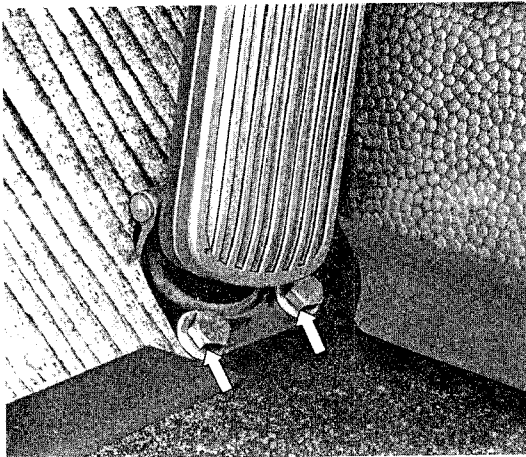


Fig. 125

6. Disconnect brake cylinder push rod from pedal.

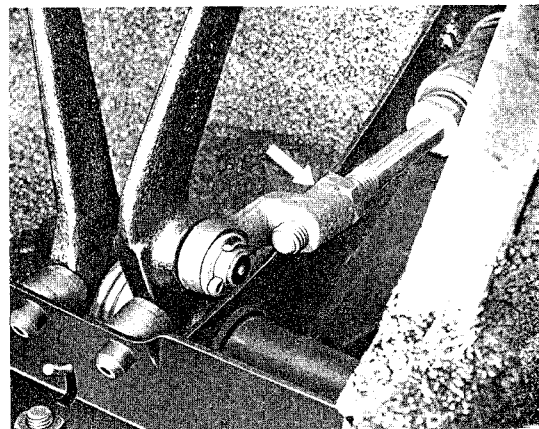


Fig. 127

Installation

7. Remove three screws from base of pedal bracket.
8. Release brake pedal return spring.
9. Remove clutch pedal roll pin.
10. Remove pedals from the shaft observing the arrangement of parts.
11. Remove pedal shaft from the pedal bracket.

The installation is accomplished in the reverse order of removal observing the following points:

1. Clean all parts and inspect for wear. Install new parts where necessary.
2. Install new bushings.
3. Grease all bearing points.
4. Before installing pedals, note the correct arrangement of the return spring and thrust washer.

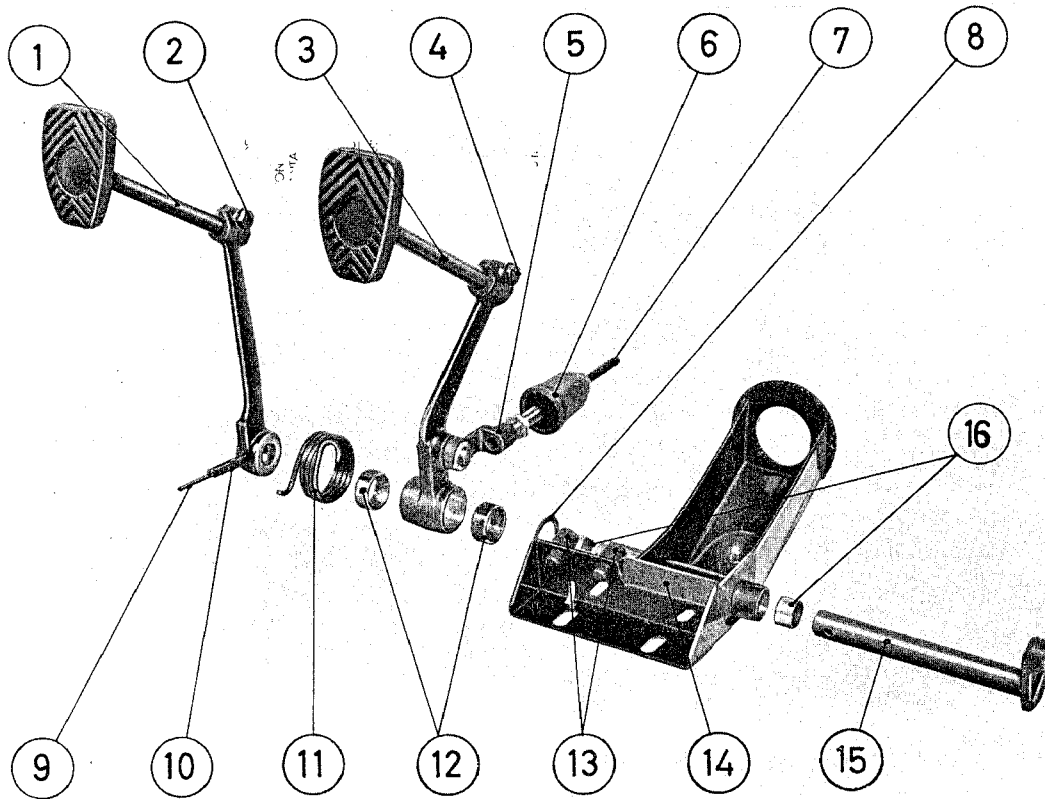


Fig. 128

Pedal Assembly

- | | |
|---|------------------------|
| ① Clutch pedal | ⑨ Roll pin |
| ② Clamp screw | ⑩ Heavy roll pin |
| ③ Brake pedal | ⑪ Return spring |
| ④ Clamp screw | ⑫ Bushings |
| ⑤ Connecting link | ⑬ Rubber buffer pads |
| ⑥ Rubber boot (inverted after installing) | ⑭ Pedal bracket |
| ⑦ Push rod | ⑮ Clutch pedal shaft |
| ⑧ Washer | ⑯ Pedal shaft bushings |