

Missing Supplement page NK12
Disassembly and Assembly

you can email a copy to 356@miplace.com if you have one.

7. Install main venturis. When installing the venturis make certain that the venturi throat is facing up, that is, so that the writing on the venturi tubes can be read from above. Firmly tighten venturi securing screws but do not overtighten.
8. Check for radial play of throttle shaft. Excessive play will allow false air to enter the induction barrel, thus impairing engine starting and idling.

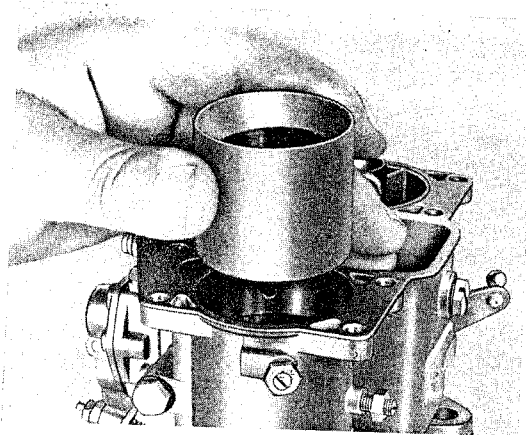


Fig. 12

9. Inspect idle mixture screws; burred, bent, or broken needle tips are unsatisfactory requiring replacement of screw.